

## UltraWrap™ Cookie & Candy Jar Transfer Instructions

**Read these instructions completely** before you begin.

### Supplies Needed

- Sublimatable Cookie or Candy Jar
- UltraWrap for Cookie or Candy Jar
- Heat Tape
- Water & clean sponge
- Heat Gloves or Oven Mitts

**Important: Read instructions before use.**

### Step 1: Adjust Your Oven

UltraWraps are designed for use in regular or convection ovens or industrial conveyor ovens, *only*. Do not use in a microwave oven under any circumstances. Place jar on center rack of oven. **Preheat** oven to **Bake at 425° F (400° F in convection oven)**. For best results, oven must be at full temperature prior to using UltraWraps.

Oven Temperature:**Bake at 425° F (400° F in convection oven)**

Dwell Time: **12-14 minutes**


***Note:** These instructions, including transfer times and temperatures, are based on the inks, paper, ovens and products we use. Your inks, papers, etc. may require adjustments in your time/temp settings.*

### Step 2:

Trim transfer. Final paper size should be 6 x 21" (cookie jar) or 12 x 5" (candy jar). Ideal Image size: 4 x 18" (cookie jar) or 11 x 4" (candy jar). This leaves a 3" gutter which is much easier than trying to print a full 360° image.

### Step 3:

Align transfer around jar so both ends meet together (aligned straight). Hold the lead edge of the transfer in this position and tape the lead edge onto the center of the jar with a 1" piece of heat tape. Keep the transfer in perfect alignment as you tape the lead edge.

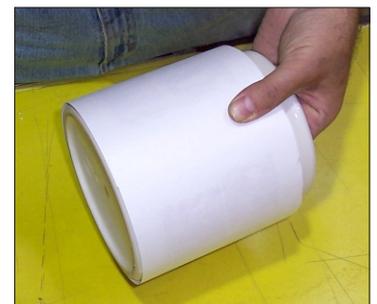

**Step 4:**

Bring the second edge of the transfer back together with the lead edge (in alignment). **Do not** tape down the tail edge of the transfer!



**Step 5:**

Hold the two ends together with one hand and lightly moisten the transfer about 20% with a clean, damp sponge.



**Step 6:**

Immediately place the jar in the center of the UltraWrap. Line the lead edge of the wrap up with the lead edge of the transfer. Pinch/hold the lead edge of the wrap against the jar. Holding that lead edge, pick up the tail edge of the wrap and gently stretch it around the jar so that it lands within one inch of the wrap's lead edge.



**Step 7:**

Pull the tail edge of the wrap out and around the jar as illustrated.



**Step 8:**

Place the metal bars under and through the metal loops, then squeeze closed with both hands.



### **IMPORTANT!**

Inspect the wrapped jar to insure there are NO visible bulges or wrinkles showing under the wrap. If there is, unwrap the jar and reposition the transfer. The transfer will wrinkle if it is not aligned correctly. A wrinkled transfer will result in a wrinkled print.



### **Step 10:**

Place the wrapped jar in the center of your pre-heated oven, in the standing position. Bake at **425° For 12-14 minutes**. Remove with heat gloves. As you detach the wrap and peel away the transfer be careful not to rub your thumb or fingers against the printed image as the image is susceptible to smear while hot.



**Baking Tip** - When baking two or three jars at a time, keep the jars at least two inches apart for uniform heat

### **Customer Support**

For support on these or any of our products, call us toll-free, 877-795-1500, or write to us at [support@laserreproductions.com](mailto:support@laserreproductions.com)